

## Addendum to Titan™ Fuel Bunker Installation Instructions (99 0000 0947):

The flat connectors initially used on these tanks were changed for a more traditional style. Please use the following in place of step 9 and Fig. 14:

Step	Description
9	Remove from the large plastic bag the two loose heat-shrink splice terminals along with the Male/Female flat connector that does NOT have splice terminals already connected. Cut the power wires at the location you wish your pump to access power and strip the ends of all 4 wires. Connect and crimp the red power wire to the red wire of the flat connector. Connect and crimp the black ground power wire to the black wire of the flat connector. Use a small propane torch or cigarette lighter to melt the heat-shrink plastic. See Fig. 14 for wiring diagram.

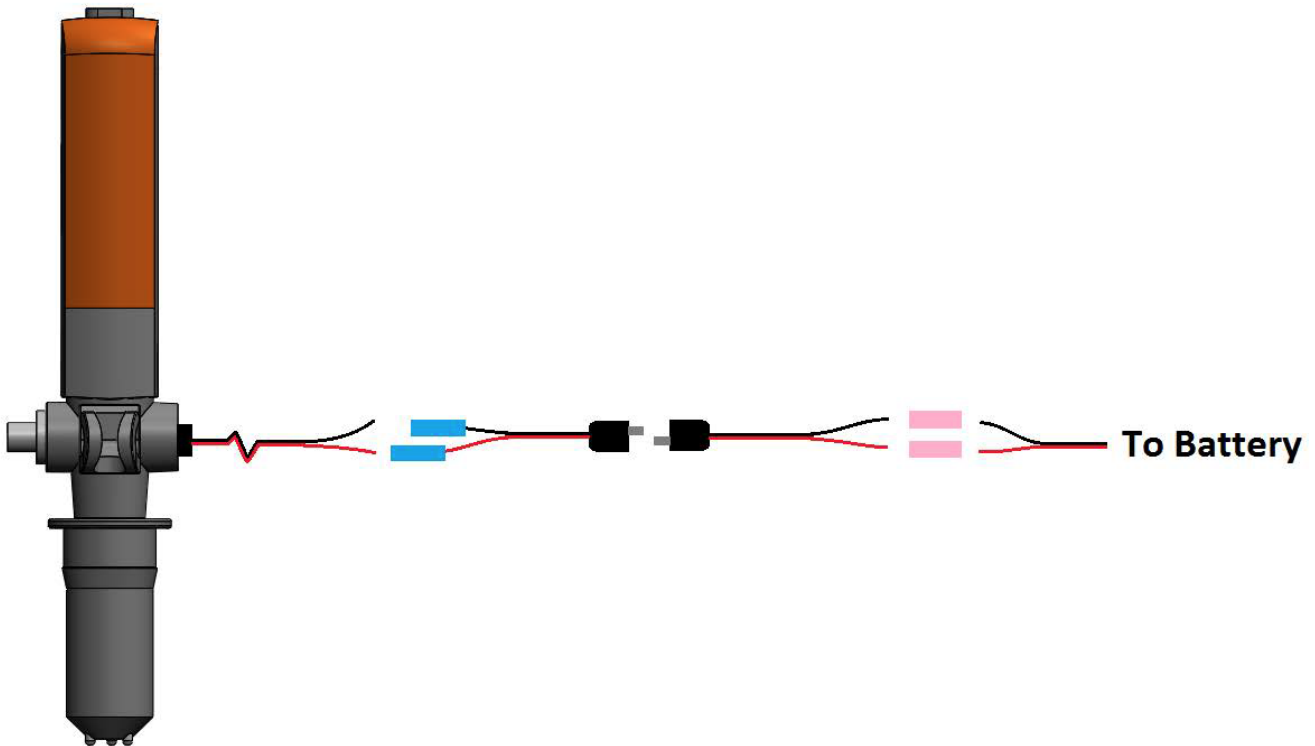


Fig. 14. Wiring diagram for pump wires